FAQ's: CorrectDeck CX Cleaning & Care

Is CorrectDeck CX scratch resistant?

CorrectDeck CX is an extremely hard surface due to the mixture of polypropylene and can withstand day to day wear and tear such as moving furniture around. See CorrectDeck Cleaning & Care Guide

Can I use bleach when cleaning CorrectDeck CX?

Bleach is not recommended for cleaning use with CorrectDeck CX. See CorrectDeck CX Cleaning and Care guide.

Can I paint or stain CorrectDeck CX?

CorrectDeck CX is not recommended to be painted or stained.

What is the best snow removal procedure with CorrectDeck CX?

Any type of salt or ice melt can be applied to CorrectDeck CX as any wood surface along with the use of a plastic tip shovel. Please do not chip at any thin ice or directly on CorrectDeck CX as it may damage the surface of the material.

What is the proper way to handle and store CorrectDeck CX?

CorrectDeck CXshould be stored on wood supports placed approximately every three feet and under a dry lumber cover or tarp. Rainwater that wouldn't stain a deck will stain stacked lumber, so remember to keep it dry.

CorrectDeck CX Cleaning & Care Guide

Condition	Recommended CorrectDeck CX Solution
General Cleaning	Dry sweep (weekly), wash with warm, soapy water & sponge.
Mold & Mildew Inhibitor	Not required
Mold & Mildew Removal	Warm, soapy water & sponge (laundry detergent without bleach is best)
Grease Stains	Warm, soapy water & sponge (laundry detergent without bleach is best), baby wipes for spot cleaning
Rust Stains	Warm, soapy water & sponge (laundry detergent without bleach is best)
Construction Marks	Rubbing alcohol
Minor Scratches	CorrectDeck CX touch-up pens or paint stripper gun (heat gun)
Deep Gouges or Cuts	Epoxy putty & touch-up pens available in the CorrectDeck CX Deck Care Kit
Minor Scuff Marks	Minor scuff marks will weather to deck color, or paint stripper gun (heat gun)
Weathering	CorrectDeck CX semi-gloss surface will weather to a natural matte finish over time. Dry sweep and wash with warm, soapy water to remove dirt and grime.
Bird Droppings	Wash with warm, soapy water & sponge.
Snow Removal	Only use a plastic edge shovel.
Ice Removal	Use ice/snow melt, DO NOT chip.

Note: These conditions are considered to be normal maintenance and are therefore not covered by our limited lifetime transferable warranty.

Addtional Information:

- Cleaning FAQ's
- Cleaning & Maintenance Video 🗐